



the water hardness and usage.

## Installation Instruction

- 1. Connect the water pressure limiting to WA-MC0604 (B) connector.
- 2. Connector the pressure limiting valve to water supply (isolation valve).
- 3. Connect the 3/8" male x 3/8" tube connector to the XP195 filter
- 4. Mount the XP195 system to the wall. Make sure the filter is easy to access for future filters replacement.
- 5. Measure and cut the 3/8" tube between the pressure valve and the XP195 system. Connect the tube by inserting into the connectors firmly.
- 6. Measure the distance between the XP195 waste connector and the coffee machine and cut the tube to the size measured.
- 7. Connect the 1/2" female connector to the coffee machine.
- 8. Insert the 3/8" to the XP195 and then to the coffee machine

## System start-up

- 1. Check to make sure everything is connected firmly. Any weak connection can cause water to leak.
- 2. Slowly turn on the water supply isolation valve.
- 3. Check for any leak.
- 4. The water started to fill the coffee boiler tank in a couple of minutes.
- 5. Once the tank is full, you can start up the coffee machine.

## Xsential

78 Daly Street Ascot Western Australia 6104 **1300 366 295** support@xsential.com.au