


QRE-15PB Water Filter Installation Instruction

Note: it is Watermark regulation that all Xsential water filter must install with a pressure limiting with dual check valves unless otherwise specify. Xsential will be liable for any incorrection installation. Please make the system is install by qualified plumber.

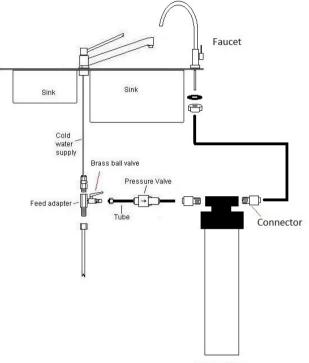

Instruction (for new flick mixer tap only):

- 1. Turn off the main water supply
- 2. Release the water pressure by opening the tap until there is no water coming out
- 3. Mount the filter to a secure position
- 4. Disconnect the cold water supply end of the braided hose of the tap
- 5. Connect a 1/2" brass fitting to the cold water supply pipe
- 6. Screw the water filter supply ball valve to the 1/2" brass fitting
- 7. Measure and cut the tube between the ball valve and the filter
- 8. Connect the tube to the ball valve and find a secure place to install the pressure limiting valve
- 9. Cut the tube and insert the pressure valve between the ball valve and the filter
- 10. Measure and cut the tube between the filter and the faucet
- 11. Determine the faucet position and drill the hole with a drill
- 12. Mount the faucet as shown above
- 13. Insert the tube to the outlet of the filter head
- 14. Insert the other of the tube to the faucet installed
- 15. Turn on the main water supply
- 16. Slowly turn on the faucet
- 17. Flush the filter for about 3 minutes to remove the carbon fine
- 18. Check for any sign of leak. Fix it if there is any.
- 19. Turn off the faucet

It is very important the filter is replaced at least every 12 months. However, water quality can also effect the lifespan of the filter. You can register with Xsential if you want us to automatically send you a service reminder.

Xsential 78 Daly Street Ascot Western Australia 6104 1300 366 295 info@xsential.com.au Water Filter