

Pressure Limiting Valve with Dual Check *XPV350 and XPV600*

Installation Instructions

This valve may be mounted on before or after an isolating valve.

1. Flush all pipework before installation. This will remove any solids in the pipe.
2. Check the flow direction of the valve.
3. Ensure that the mesh strainer is inside the inlet of the valve.
4. Install according to the arrow flow direction.

Xsential Pty Ltd

PO Box 907 Mount Lawley Western Australia 6929

Ph: +61 1300 366 295 www.xsential.com.au